

S410 Parts Replacement Instructions

This document is intended for service personnel. It provides information not found in the user manual. For information such as replacing the battery pack and hard disk drive kit, see the user manual of the product.

Handle (P/N 344876800018)	2
Side door (P/N 340876800006)	2
Rear door (P/N 340876800007)	3
HDD in the HDD kit (P/Ns 523400320743, 5234A0920001)	3
ODD Kit (P/N 541387680013)	4
ODD in the ODD kit (P/N 523487680053)	5
Keyboard (P/N 340876800011)	5

Handle (P/N 344876800018)

To remove:

1. Remove the four screws that secure the handle to S410.



2. Turn S410 over and lay it down. Lift up the handle to detach it from S410. Two small covers will also come off.



To install:

Reverse the removal procedure to install the new part.

Side door (P/N 340876800006)

To remove:

1. Remove the four screws that secure the door to S410.



2. Detach the door from S410.

To install:

Reverse the removal procedure to install the new part.

Rear door (P/N 340876800007)

To remove:

1. Remove the six screws that secure the door to S410.



2. Detach the door from \$410.

To install:

Reverse the removal procedure to install the new part.

HDD in the HDD kit (P/Ns 523400320743, 5234A0920001)

To remove:

1. Remove two screws (**①**) from the metal cover, press in the six side tabs (**②**) to disengage them, and detach the metal cover from the HDD kit.



2. Detach the HDD from the HDD kit.



3. Disconnect the interface connector from the HDD.



To install:

Reverse the removal procedure to install the new part.

ODD Kit (P/N 541387680013)

To remove:

1. Remove the screw that secures the ODD kit.



2. Slide the latch to the unlocked position () () and, while holding it there, pull the ODD kit out of the bay ().




To install:

Reverse the removal procedure to install the new part.

ODD in the ODD kit (P/N 523487680053)

To remove:

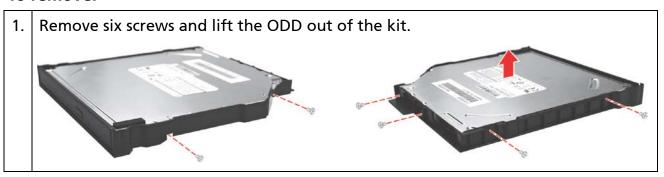

To install:

Reverse the removal procedure to install the new part.

Keyboard (P/N 340876800011)

To remove:

- 1. Remove the battery pack. For models having two battery packs, remove both battery packs.
- 2. Remove two screws from the rear of S410.



Screw P/N: 371102010432

3. Remove eight screws from above the keyboard. Then detach the keyboard/hinge cover.



Screw P/N: 371102010432

4. Flip the keyboard over and put it aside. Be careful not to pull the FPCs of the keyboard.



5. Open the Mylar film to access the connectors.

Using a tool such as tweezers or a small flat-head screwdriver, gently pry up the actuator of the connector to release the connection. Then pull the FPC out of the connector. Disconnect both cables in the same way.



To install:

Reverse the removal procedure to install the new part.